

QUICK REFERENCE GUIDE

GENERAL INFORMATION	1
FUEL SYSTEM	2
ENGINE LUBRICATION SYSTEM	3
EXHAUST SYSTEM	4
ENGINE TOP END	5
ENGINE REMOVAL AND INSTALLATION	6
ENGINE BOTTOM END	7
COOLING AND BILGE SYSTEMS	8
DRIVE SHAFT	9
PUMP AND IMPELLER	10
STEERING	11
HULL/ENGINE HOOD	12
ELECTRICAL SYSTEM	13
STORAGE AND TRANSPORTING	14
APPENDIX	15
Supplement-1987 Model	16
Supplement-1988 Model	17
Supplement-1989 Model	18
Supplement-1990 Model	19
Supplement-1991 Model	20

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.