


## HYDRAULIC BRAKES

### DISASSEMBLY

Remove the socket bolt and caliper bracket from the caliper.

Remove the pad spring, pivot boots and socket bolt.

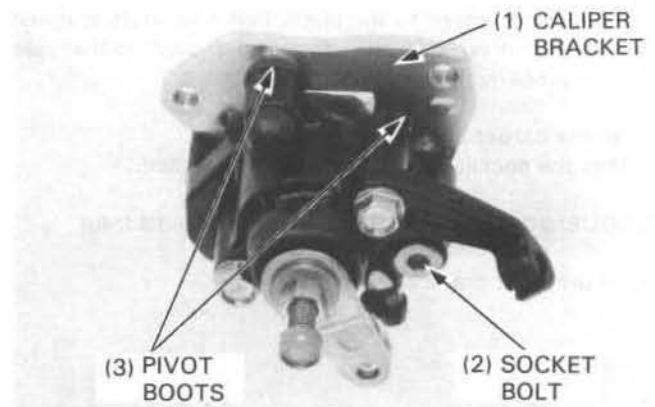

Position the caliper with the piston down and apply small squirts of air pressure to the fluid inlet to remove the piston.

#### WARNING


- Do not use high pressure air or bring the nozzle too close to the inlet.
- Place a shop towel over the piston to prevent the piston from becoming a projectile.



Push the dust and piston seals in and lift them out. Clean the seal grooves with clean brake fluid.

#### CAUTION

- Be careful not to damage the piston sliding surface.

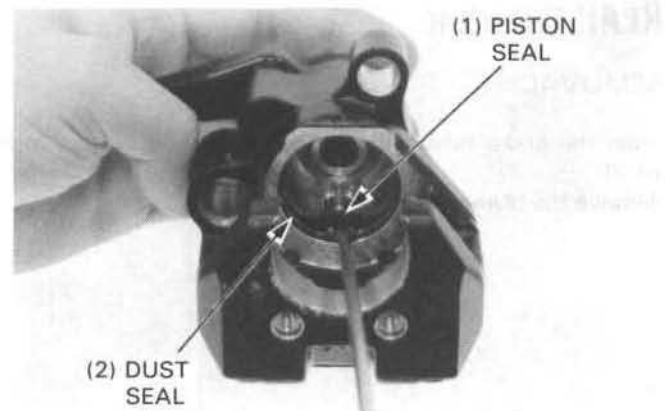

### INSPECTION

Inspect the caliper cylinder for scratches, scoring or other damage.

Measure the cylinder I.D.

**SERVICE LIMIT: 34.020 mm (1.3394 in)**

